



## Change hotend BCN3D Sigma

Please follow the sequence:

1.

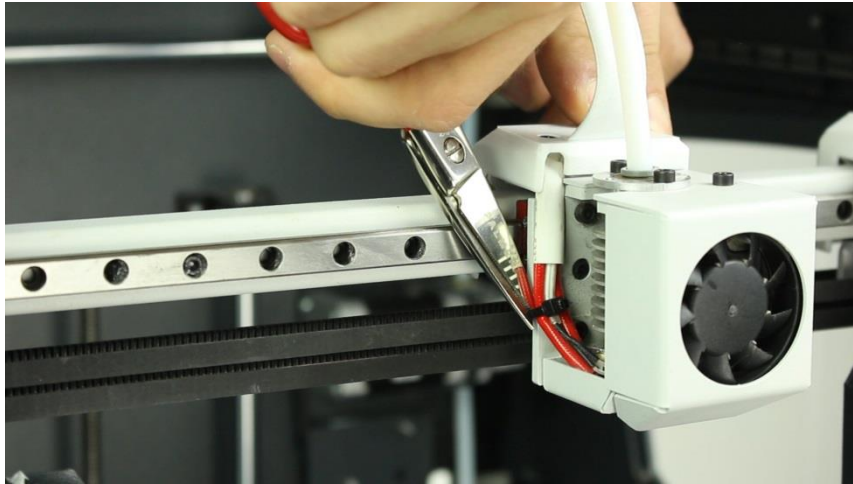


2.

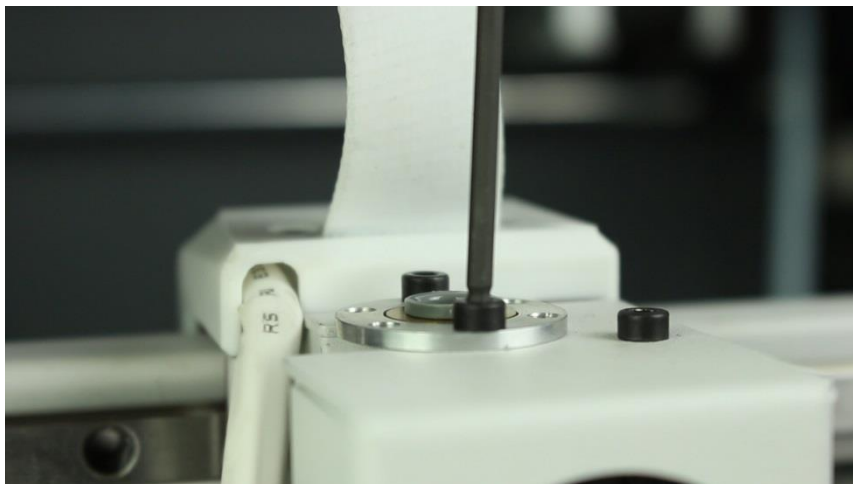


3.



4.

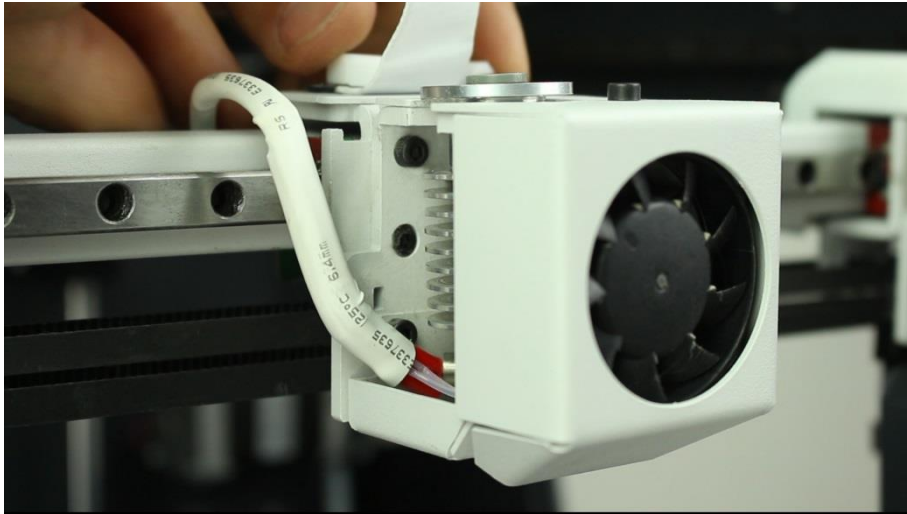


5.

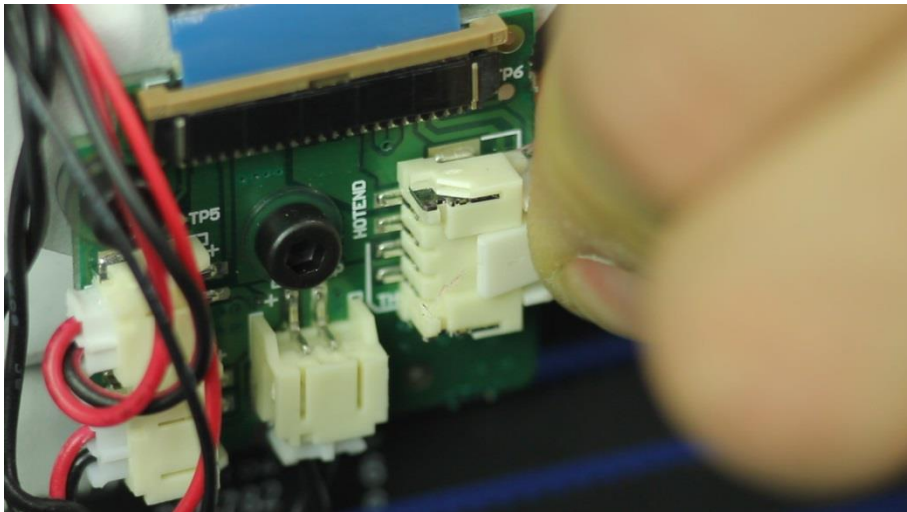


6.



7.

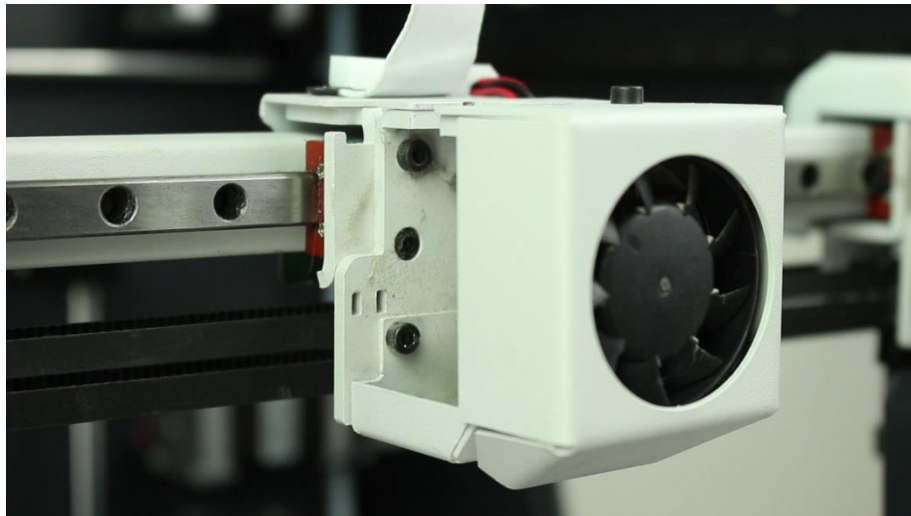

8.

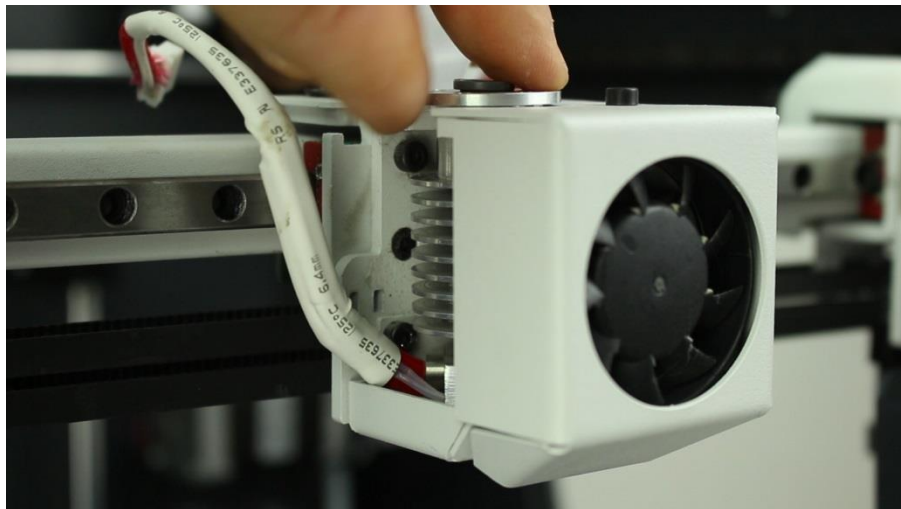

9.



10.



11. Make the reverse process with the other screws